



Bring the simplicity of Playaway all-in-one audiobooks to life for your staff and patrons with this how-to guide.

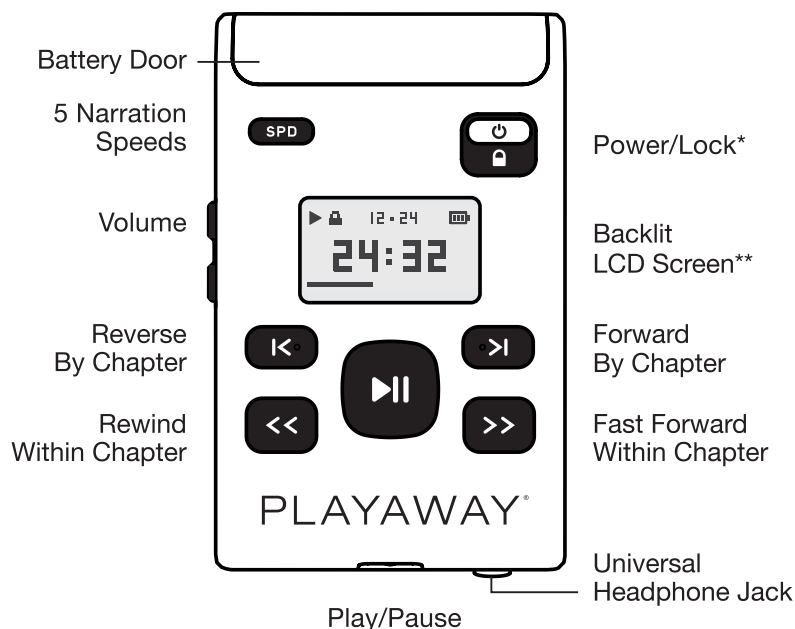

***To Turn Off:** Hold down  for 3 seconds.

To Lock + Unlock Keypad: While in PLAY, quickly press power once;  or  symbol will appear on LCD screen.

****Backlit LCD Screen**

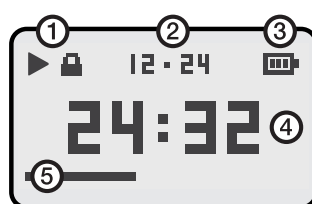

- 1 Current Function (Play/Pause/Lock)
- 2 Current • Total (Chapters)
- 3 Battery Life
- 4 Time Remaining in Chapter
- 5 Book Progress Bar

start listening



Plug earphones, speakers, or car adapter into the universal headphone jack on bottom of unit.



Press the POWER button.*



Press the PLAY button.

Enjoy your HD audiobook experience!

*Hint: If the power does not turn on, you may need to insert or replace the AAA battery.